

# MultiMixBraise AutoTemp 56

#### Technical data

10000047941-TDA-000-03




The appliance can be shown with some accessory on the photo.

- Multi, MultiMix and MultiMixBraise can be combined.
- Frying function up to 200°C.
- Boiling function with the option for gentle heating
- The control can be mounted either to the right or to the left of the kettle.



## Dimensions of the kettle and the mounting pillar

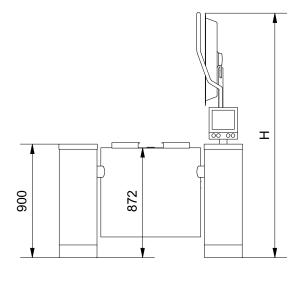




L2

L<sub>3</sub>

Fs

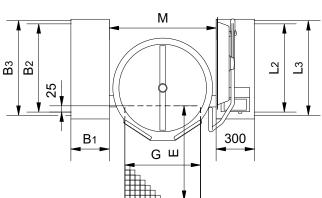

Size	L2/L3 [mm]	Fm [mm]	Fs [mm]	H [mm]	M [mm]	G [mm]	E [mm]
MultiMixBraise 75	500/550	755	1055	1810	735	500	800
MultiMixBraise 100	700/750	830	1055	1970	852	600	900
MultiMixBraise 150	700/750	945	1065	2090	1000	600	900
MultiMixBraise 200	700/750	1025	1065	2130	1100	600	900
MultiMixBraise 300	700/750	1145	1145	2247	1200	600	900

Fm is the shortest distance to enable tilting the kettle. Fs is the shortest distance to enable service.

Bigger distance is recommended in consideration of service and the risk of crushing. National/local regulations must always be observed.

It is has to be considered to enlarge the drain cf. dimensions in the section 'Location of the drain valve'.

<sup>\*</sup>For kettles with butterfly valves or drain valves, the content can run behind the floor drain when tilting with open valve. This can occur e.g. when cleaning.



## Dimensions for the support pillars

Size	B1 [mm]	B2 [mm]	B3 [mm]
80 x 425 mm*	80	425	-
150 x 300 mm	150	275	300
230 x 550 mm	230	500	550
300 x 550 mm	300	500	550
230 x 750 mm	230	700	750
300 x 750 mm	300	700	750
400 x 750 mm	400	700	750
500 x 750 mm	500	700	750

<sup>\*</sup> Only for one kettle and maximal 75 L.

### **Electric connection for Braise-kettles**

In the users manual there is important information regarding supply and connections.

#### 3~400V+PE, 50/60Hz

Size [I]	Power [kW]	Current consump- tion [A]	Time to boil 10-90°C [min]	Isc [kA] min/max
75	15,2	26/26/26	38	0,25/10
100	21,5	35/35/35	36	0,32/10
150	32,8	53/53/53	35	0,25/10
200	39,3	62/62/62	39	0,25/10
300	48	75/75/75	47	0,25/10

Leak current under 10 mA.

### **Energy efficiency**

The Braise kettles have an energy efficiency of 98%, measured according to EFCEM standard.

#### Water

In the users manual there is important information regarding supply and connections.

Water	Pressure [bar]	Amount [l/min]	Temperature [°C]
Cold	1,5-6	35	-
Hot	1,5-6	35	< 60

Hot water is only used when the kettle is equipped with a spray gun or the possibility to use hot water in the kettle.



#### Volume

Size [I]	Net [l]	Gross [l]	Diameter [mm]	Depth [mm]
75	75	91	577	350
100	100	132	694	350
150	150	195	842	350
200	200	244	942	350
300	300	358	1042	420

## Ingress protection class

IPX5

#### **Ventilation**

#### 3~400V+PE, 50/60Hz

Size [l]	Sensible [W]	Latent [W]	Steam [kg/h]
75	532	3040	4,5
100	753	4300	6,3
150	1148	6560	9,6
200	1376	7860	11,6
300	1680	9600	14,1

The data is based on the German standard VDI 2052 for dimensioning of ventilation facilities.

The values are based on experience with an average product and a normal usage, and the actual demand varies by the efficiency of the appliance, the control and the way of use.

The simultaneity factor, which can be found in VDI 2052 is not taken into account.

#### Noise


Noise from the machine < 60 dB(A).

#### **Stirrer**

Speed of the stirrer: 5 - 125 rpm.



## Distance under the kettle

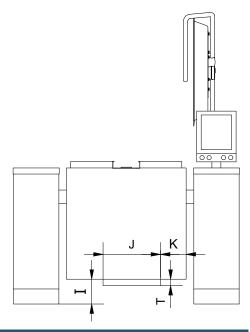


Size [l]	l [mm]	J [mm]	K [mm]	T [mm]
75	190	380	110	41,5
100	190	380	170	41,5
150	180	485	140	46,5
200	180	485	190	46,5
300	110	485	240	46,5



# **Additional equipment**

### Location of the drain valve

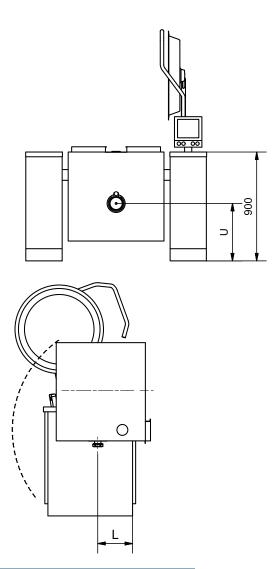

Size [l]	L [mm]	U [mm]
75	200	600
100	200	600
150	200	600
200	200	600
300	270	530


## **Butterfly valve with drain downwards**

The unit can be dismounted e.g. when cleaning, and a plug to close the pipe when the valves is not mounted is attached.




The angle is welded to the valve, providing a shorter construction.


### 2" ISO Clamp




### 3" ISO Clamp




### 2" SMS



3" SMS




2" DS





#### 3" DS




## Butterfly valve with connection for a pump

This valve is suitable for connecting a pump to the kettle.


If an angle (accessory) is mounted, the valve can also be used without a pump. e.g. when cleaning.

The unit can be dismounted e.g. when cleaning, and a plug to close the pipe when the valves is not mounted is attached.


#### 2" ISO Clamp



### 3" ISO Clamp




2" SMS







3" SMS

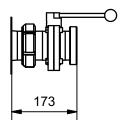

2" DS




3" DS




## Angles for butterfly valve

## Loose angle for 2" ISO Clamp butterfly valve



### Loose angle for 3" ISO Clamp butterfly valve







## Loose angle for 2" SMS butterfly valve




## Loose angle for 3" SMS butterfly valve




### Loose angle for 2" DS butterfly valve



## Loose angle for 3" DS butterfly valve




# Drain tap, Echtermann type





## **Outlet for customized solution**


## 2" outlet



### 3" outlet




## 3" outlet with ISO Clamp






## **Trolley for accessory**

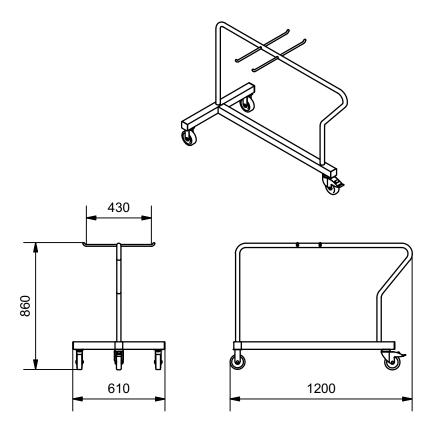

## Wall bracket for accessory

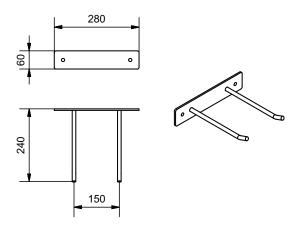

Jøni A/S reserve our right to alterations. Reservations against misprints.